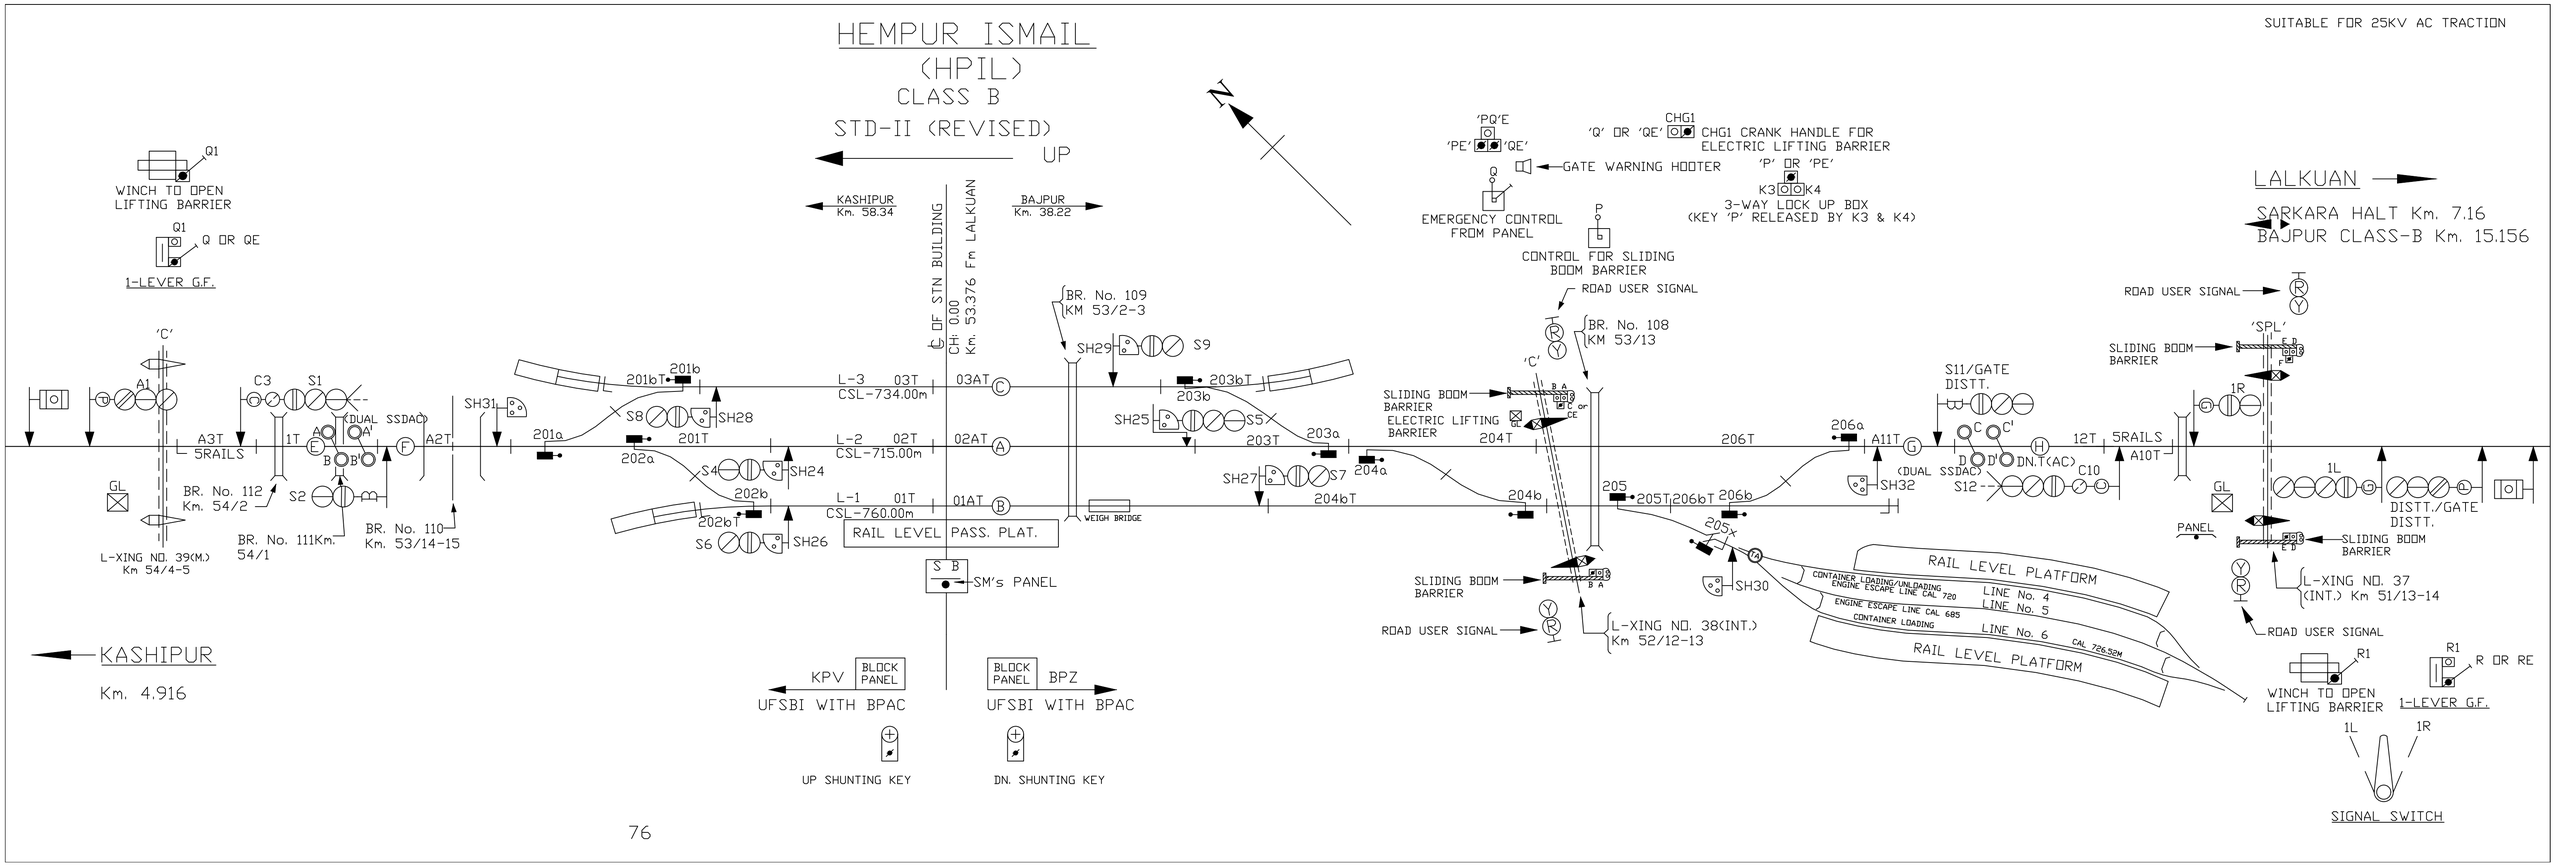
HEMPUR ISMAIL
(HPIL)
CLASS B
STD-II (REVISED)
SUITABLE FOR 25KV AC TRACTION
UP
KASHIPUR
Km. 58.34
BAJPUR
Km. 38.22
℄ OF STN BUILDING
CH: 0.00
Km. 53.376 Fm LALKUAN
WINCH TO OPEN
LIFTING BARRIER
Q1
Q OR QE
1-LEVER G.F.
'C'
A1
C3
S1
(DUAL SSDAC)
A3T
5RAILS
1T
A2T
GL
BR. No. 112
Km. 54/2
S2
BR. No. 111Km.
54/1
BR. No. 110
Km. 53/14-15
L-XING NO. 39(M.)
Km 54/4-5
SH31
201a
201bT
201b
S8
SH28
201T
202a
S4
SH24
202b
202bT
S6
SH26
L-3 03T
CSL-734.00m
03AT
L-2 02T
CSL-715.00m
02AT
L-1 01T
CSL-760.00m
01AT
RAIL LEVEL PASS. PLAT.
S B
SM's PANEL
BR. No. 109
KM 53/2-3
SH29
S9
203bT
203b
SH25
S5
203T
203a
SH27
S7
204a
204bT
204b
WEIGH BRIDGE
KPV
BLOCK PANEL
UFSBI WITH BPAC
BLOCK PANEL
BPZ
UFSBI WITH BPAC
UP SHUNTING KEY
DN. SHUNTING KEY
KASHIPUR
Km. 4.916
'PQ'E
'PE'
'QE'
'Q' OR 'QE'
CHG1
CHG1 CRANK HANDLE FOR
ELECTRIC LIFTING BARRIER
GATE WARNING HOOTER
'P' OR 'PE'
K3
K4
3-WAY LOCK UP BOX
(KEY 'P' RELEASED BY K3 & K4)
EMERGENCY CONTROL
FROM PANEL
CONTROL FOR SLIDING
BOOM BARRIER
ROAD USER SIGNAL
BR. No. 108
KM 53/13
SLIDING BOOM
BARRIER
ELECTRIC LIFTING
BARRIER
204T
206T
205
205T
206bT
206b
205x
SH30
SLIDING BOOM
BARRIER
ROAD USER SIGNAL
L-XING NO. 38(INT.)
Km 52/12-13
206a
A11T
SH32
S11/GATE
DISTT.
(DUAL SSDAC)
S12
DN.T(AC)
C10
12T
5RAILS
A10T
LALKUAN
SARKARA HALT Km. 7.16
BAJPUR CLASS-B Km. 15.156
ROAD USER SIGNAL
'SPL'
SLIDING BOOM
BARRIER
1R
1L
DISTT./GATE
DISTT.
PANEL
SLIDING BOOM
BARRIER
L-XING NO. 37
(INT.) Km 51/13-14
ROAD USER SIGNAL
RAIL LEVEL PLATFORM
CONTAINER LOADING/UNLOADING
ENGINE ESCAPE LINE CAL 720
LINE No. 4
LINE No. 5
ENGINE ESCAPE LINE CAL 685
CONTAINER LOADING
LINE No. 6
CAL 726.52M
RAIL LEVEL PLATFORM
R1
WINCH TO OPEN
LIFTING BARRIER
R1
R OR RE
1-LEVER G.F.
1L
1R
SIGNAL SWITCH